

18pcs LED Par Light

User Manual



This manual contains important information.
Please read before operating fixture.

1 SECURITY TIPS

WARNING!!! To reduce the risk of fire, electric shock, or injury to persons, follow these important safety instructions:

- non-professionals, not to disassemble the light arbitrarily and lighting accessories inside.
- rated voltage range: AC110V-120V/60Hz or AC200V-240V / 50HZ (to be selected).
- not beam irradiate the flammable materials, flammable materials and the lamp should be maintained at least 1M over the distance.
- lamps used in ambient temperature: -15 °C -40 °C, the highest temperature of the surface of the lamp: 60 °C.
- to keep away from the liquid substance and humid environment.
- before using the lights must ensure the good grounding, can not install charging and remove any parts.
- the installation of lamps, must be fixed screw fasteners with additional security cable and regular inspection.
- lamps consecutive working hours is not recommended more than 10 hours.
- should stop using the lights in time when happens unusual conditions during the process
- lamp parts of the rotation, external accessories and paste parts should be regular inspected, such as the emergence of loose and rock, should be reinforced in a timely manner to prevent the accident.
- lamps adopt strong winds to refrigerate, it is easy to accumulate the dust, so you have to clean it weekly especially the cooling air opening, otherwise the dust will plug leading to poor light

2 TECHNOLOGY REFERENCE

Voltage: 110V-240V/50-60Hz

Power: 240W

DMX-512 access control 8CH

Light Source: 18*18W(6 in 1) LED lamp beads, the internal self-propelled three kinds of programs, non-polar blending, changing

Color, strobe (speed adjustable), DMX-512 control model

Size: 280mm * 280mm * 320mm

Weight: 2.8kg

3 Board Instruction



A. Menu

B. UP

C. Down

D. Enter

A

B

C

D

Press **A** button, there will be eight different effects. The first two letters stands for functions (refer to Diagram II) The last two letters stands for DMX address, or speed,. You can modify it with **B** or **C** button. And press **D** button for confirmation.

No	Display	Function
1	D001	CH10 Add Code, with B. C button to change the code(001-512)
2	CC01	Color Jump Change, Speed adjustable by B or C button(01-99)

3	CP01	Color Gradual Change, speed adjustable by B or C button(01-99)
4	DE01	Color Pulse Change, Speed adjustable by B or C button(01-99)
5	BE01	Music activated
6	FH01	Color strobe
7	R255	Red, with B. C button to change the color(0-255)
8	G255	Green with B. C button to change the color(0-255)
9	B255	Blue, with B. C button to change the color(0-255)
10	O255	White, with B. C button to change the color(0-255)
11	Y255	Yellow, with B. C button to change the color(0-255)
12	P255	Purple, with B. C button to change the color(0-255)

4 DMX CHANNEL SHEET

Channel	Function	Explanation
1channel	General Dimmer	R.G.B.W. linear 0%-100% dimmer, from dark to bright
2channel	General Strobe	R.G.B.W. Y.P. strobe, from slow to fast
3channel	Control Mode selection	0-50 CH10 control, 51-100 color Jump change , 101-150 gradual change, 151-200 Pulse change 201-255 sound control
4channel	Speed	Speed From slow to fast
5channel	R Dimmer	Red(1-255, dimmer, from dark to bright)
6channel	G Dimmer	Green (1-255, dimmer, from dark to bright)
7channel	B Dimmer	Blue (1-255, dimmer, from dark to bright)
8channel	W Dimmer	White (1-255, dimmer, from dark to bright)
9channel	P Dimmer	Purple (1-255, dimmer, from dark to bright)
10channel	Y Dimmer	Yellow (1-255, dimmer, from dark to bright)

5 FIXED EQUIPMENT

Please fasten the fixture clamp before hanging. The clamp can be fasten by the little hole in the middle of the bracket, then tie with a safety belt. The loading capacity of the safety belt should be 10 times than the weight of the fixture itself.

6 CONNECTION OF DMX-512 AND CONNETION WITH THE LIGHT EQUIPMENT

Please connect XLR-XLR control wire with every light from the output of DMX.


XLR connection :

DMX-OUTPUT




Pin 1: Screen
Pin 2: Signal -
Pin 3: Signal +

DMX-INPUT

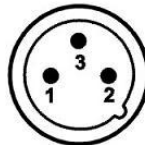

Pin 1: Screen
Pin 2: Signal -
Pin 3: Signal +

ATTENTION: Please do remember to connect one circle circuit plug on the output signal of last equipment. And this circle circuit plug was connected a 120ohm resistance between terminals 2 and 3 of the CANON plug, connect this circle circuit plug can avoid the signal flash phenomena of signal DMX512 during the transmission.

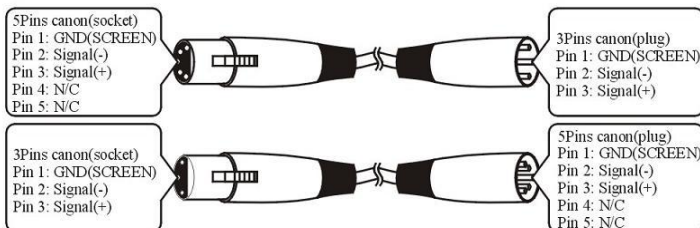

7 Maintenance

Problems	Check list	Trouble Shooting
The fixture do not work	<ol style="list-style-type: none"> 1. If your power as same as the input of the machine. 2. If the fuse was broken. 	<ol style="list-style-type: none"> 1. Make sure the voltage. 2. Replace the same fuse.
LED dimmed	If your power us same as the input of the machine	Make sure the voltage input.
No DMX input	<ol style="list-style-type: none"> 1. If the polarity is opposited in the DMX controller. 2. If it is in DMX mode. 3. If there are 2 Master in a loop. 	<ol style="list-style-type: none"> 1. Correct the DMX polarity. 2. Change to the DMX mode. 3. Set one piece into Slave mode.
Par Light Set works abnormality	1. Check if the serial is correct on the Par Light display	1. Set the right serial No on the single Par Light

8 AFTER SERVICE

1. Our company offer technical consultation to customers for ever.
2. If the machine is wrong and need repairmen, please truthfully fill in the related content and feedback us the problems timely, as well as we have to improve the product.
3. In addition to the lamp, also matching accessories are as follows:
accessories: Power line 1 piece **Optional parts:** (customers)

Warranty Card

Name	Model
------	-------

Production	Purchase
------------	----------

End User
Company Name:
Add:

Sale Store	
Link man:	Stamp
Tel:	

Description: These must be truthfully fill, seal by the end-user and point-of-sale, or else the warranty will not work (warranty period and terms, see the following)

warranty period: one year since purchase warranty terms: 1、 If fail when using the product in normal state, you can made under the provisions of the warranty, show the warranty card and purchase bills(copy), and enjoy free maintenance service in a specific service center or the manufacturer.

2. The following will be the implementation of paid service:

- (1)Without the effective warranty card
- (2)There's blank, alter and no point-of-sale name
- (3)Fail caused by unresistance
- (4)Fail caused by transportation or unloading
- (5)Fail caused by not operate by manual
- (6)Fail caused by disassemble without unauthorized
- (7)Fail caused by using the unauthorized control system

Note:

Based on our company continue to improve the product, the statement containing data may have changed, and will not notice the change any more. Company retains its right to change specifications related when product is improved. Thanks for your understanding.